

BUH

钢球组件(螺栓型)



BUH-S 06012~08040
(锯齿型)



BUH-S 10015~24100
(锯齿型)



BUH-F 06012~08040
(平面型)




BUH-S 10015~24100
(平面型)



BUH-E 06012~08040
(树脂型)




BUH-E 10015~24100
(树脂型)

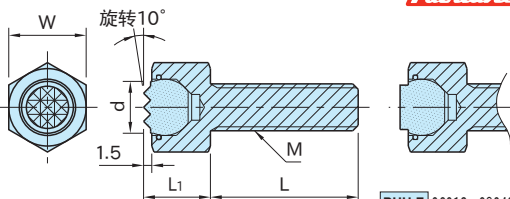

BUH-S 06012~08040
(锯齿型)

BUH-F 06012~08040
(平面型)
BUH-E 06012~08040
(树脂型)

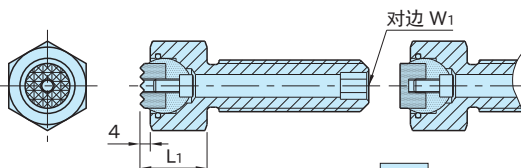

BUH-S 10015~24100
(锯齿型)

BUH-F 10015~24100
(平面型)
BUH-E 10015~24100
(树脂型)

类型	本体	球	衬垫	
BUH-S 06012~08040 BUH-F 06012~08040	SCM440 淬火回火 四氧化三铁膜	SKH51 淬火回火 四氧化三铁膜 HRC60	聚缩醛 白色	
BUH-E 06012~08040				
BUH-S 10015~24100		SUS440	SKH51 淬火回火 四氧化三铁膜 HRC62	SNCM220 渗碳淬火 四氧化三铁膜 HRC60
BUH-F 10015~24100				
BUH-E 10015~24100			聚缩醛 白色	

★One Point

衬垫直径 ϕ 6~25


锯齿型		平面型		树脂型		M	L	W	L ₁	d	W ₁	容许载荷 (kN) 注)
型 号	质量(g)	型 号	质量(g)	型 号	质量(g)							
BUH-06012-S	7	BUH-06012-F	7	BUH-06012-E	6	M6×1	12	10	9.5	6	-	5.3
BUH-06025-S	8	BUH-06025-F	8	BUH-06025-E	7		25					
BUH-06040-S	10	BUH-06040-F	10	BUH-06040-E	9		40					
BUH-08012-S	12	BUH-08012-F	12	BUH-08012-E	11	M8×1.25	12	13	13	8.5	-	10.9
BUH-08025-S	18	BUH-08025-F	18	BUH-08025-E	16		25					
BUH-08040-S	22	BUH-08040-F	22	BUH-08040-E	21		40					

注) 不包括树脂型。


锯齿型		平面型		树脂型		M	L	W	L ₁	d	W ₁	容许载荷 (kN) 注)
型 号	质量(g)	型 号	质量(g)	型 号	质量(g)							
BUH-10015-S	26	BUH-10015-F	26	BUH-10015-E	22	M10×1.5	15	17	17	10	3	18.4
BUH-10030-S	33	BUH-10030-F	33	BUH-10030-E	29		30					
BUH-10050-S	43	BUH-10050-F	43	BUH-10050-E	39		50					
BUH-12020-S	55	BUH-12020-F	55	BUH-12020-E	49	M12×1.75	20	19	19	12	5	24.5
BUH-12040-S	65	BUH-12040-F	65	BUH-12040-E	59		40					
BUH-12060-S	75	BUH-12060-F	75	BUH-12060-E	69		60					
BUH-16025-S	87	BUH-16025-F	87	BUH-16025-E	75	M16×2	25	24	23	16	6	43.6
BUH-16050-S	117	BUH-16050-F	117	BUH-16050-E	105		50					
BUH-16080-S	152	BUH-16080-F	152	BUH-16080-E	140		80					
BUH-20030-S	153	BUH-20030-F	154	BUH-20030-E	134	M20×2.5	30	30	24	20	8	57.7
BUH-20060-S	205	BUH-20060-F	206	BUH-20060-E	186		60					
BUH-20100-S	276	BUH-20100-F	277	BUH-20100-E	257		100					
BUH-24040-S	287	BUH-24040-F	289	BUH-24040-E	257	M24×3	40	36	30	25	10	85.6
BUH-24100-S	432	BUH-24100-F	434	BUH-24100-E	402		100					

注) 不包括树脂型。

使用示例及使用方法

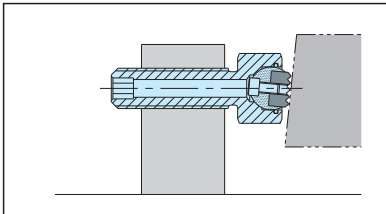

作为夹紧器或限位器使用。

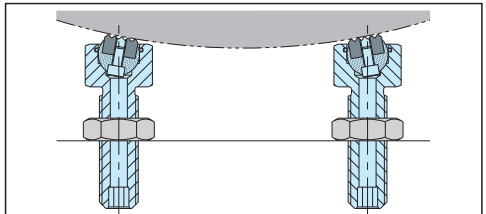

作为千斤顶使用。

注意事项

■ 衬垫的安装

BUH-S 10015~24100、BUH-F 10015~24100、BUH-E 10015~24100的衬垫，球从背面推出，请用附件内六角螺栓安装。

■ 衬垫的交换

以下产品通过拆卸安装衬垫用螺栓，可进行衬垫交换。

本体型号	衬垫型号 (参照P.470)	本体型号	衬垫型号 (参照P.467)	本体型号	衬垫型号 (参照P.467)
BUH-10015-S	HS-100	BUH-10015-F	SRP-100	BUH-10015-E	DRP-100
BUH-10030-S		BUH-10030-F		BUH-10030-E	
BUH-10050-S		BUH-10050-F		BUH-10050-E	
BUH-12020-S	HS-120	BUH-12020-F	SRP-120	BUH-12020-E	DRP-120
BUH-12040-S		BUH-12040-F		BUH-12040-E	
BUH-12060-S		BUH-12060-F		BUH-12060-E	
BUH-16025-S	HS-160	BUH-16025-F	SRP-160	BUH-16025-E	DRP-160
BUH-16050-S		BUH-16050-F		BUH-16050-E	
BUH-16080-S		BUH-16080-F		BUH-16080-E	
BUH-20030-S	HS-200	BUH-20030-F	SRP-200	BUH-20030-E	DRP-200
BUH-20060-S		BUH-20060-F		BUH-20060-E	
BUH-20100-S		BUH-20100-F		BUH-20100-E	
BUH-24040-S	HS-250	BUH-24040-F	SRP-250	BUH-24040-E	DRP-250
BUH-24100-S		BUH-24100-F		BUH-24100-E	